

## Caution


Failure to follow these instructions can damage the product or cause a hazardous condition. Disconnect power during the installation of this product. All wiring must conform to local codes and ordinances. This product is designed for use with 24 VAC systems.

For additional assistance visit [www.PelicanWireless.com](http://www.PelicanWireless.com) to request support.

## Wall Mounting

The rear cover of the remote thermostat is mounted to the wall. To separate the front cover from the rear cover, simply grasp the front and back of the unit firmly and pull apart.

Attach the rear of the remote thermostat to the wall using the included Plastic Anchors. Position the rear cover so that the wires can be fed through the rectangular opening in the back of the unit. Then mark the locations of the mounting points on the wall. Drill a 3/16" hole for each anchor. Insert the anchors into the wall and attach the rear cover using the included screws. The thermostat can also be mounted to an electrical box using the included machine screws.

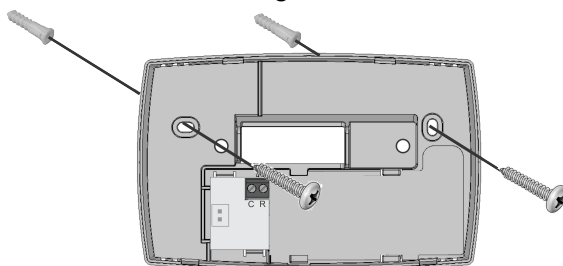

## Terminal Connections

Attach the 24 VAC power wires to terminals R and C. The front section of the unit can then be re-attached by centering it over the rear section and snapping it into place.