



REFER TO PELICAN Z24  
INSTALLATION GUIDES FOR  
CONTROL TERMINAL WIRING  
AND SEQUENCE GUIDE

REFER TO PELICAN Z24  
INSTALLATION GUIDE FOR  
WIRELESS ANTENNA  
PLACEMENT AND WIRING

ONLY A SINGLE Z24 IS  
CONNECTED TO VARIABLE  
SPEED FAN. THE TWO Z24s  
CAN BE SET TO  
COMMUNICATE STATIC  
REQUIREMENT WIRELESSLY

<p><b>Dual Duct - AC, Boiler Heat, Variable Speed Fan, and Economizer</b></p>	<p>DRAWN BY </p>	<p>CHECKED</p>	<p>DATE <b>02/18/2016</b></p>	<p>SCALE <b>NTA</b></p>	<p>SHEET NO. <b>1 of 1</b></p>
---	---	----------------	-----------------------------------	-----------------------------	------------------------------------