

REFER TO PELICAN Z24
INSTALLATION GUIDES FOR
CONTROL TERMINAL WIRING
AND SEQUENCE GUIDE

REFER TO PELICAN Z24
INSTALLATION GUIDE FOR
WIRELESS ANTENNA
PLACEMENT AND WIRING

ONLY A SINGLE Z24 IS
CONNECTED TO VARIABLE
SPEED FAN. THE TWO Z24s
CAN BE SET TO
COMMUNICATE STATIC
REQUIREMENT WIRELESSLY

