



REFER TO PELICAN Z24 INSTALLATION GUIDES FOR CONTROL TERMINAL WIRING AND SEQUENCE GUIDE

REFER TO PELICAN Z24 INSTALLATION GUIDE FOR WIRELESS ANTENNA PLACEMENT AND WIRING

| | | | | | |
|--|---|----------------|-----------------------------------|-----------------------------|------------------------------------|
| <p>AHU w/ AC Only, Bypass Damper, and Economizer Boiler for Zone Reheat</p> | <p>DRAWN BY </p> | <p>CHECKED</p> | <p>DATE 02/18/2016</p> | <p>SCALE NTA</p> | <p>SHEET NO. 1 of 1</p> |
|--|---|----------------|-----------------------------------|-----------------------------|------------------------------------|