
EXHAUST FAN PM5 ANTENNA

SEQUENCE OF OPERATIONS

THERE WILL BE A SEPARATE PM5 FOR EACH EXHAUST FAN (EF) ALLOWING FOR START/STOP AND SCHEDULING OF EFS. THE PM5 LINE VOLTAGE CONTACTS CAN OPERATE LOADS UP TO 15 AMPS @120VAC OR 10 AMPS @ 240/277VAC. THE EXHAUST FAN STATUS SHALL BE INDICATED IN THE EMS IN REAL-TIME AND HISTORICALLY.

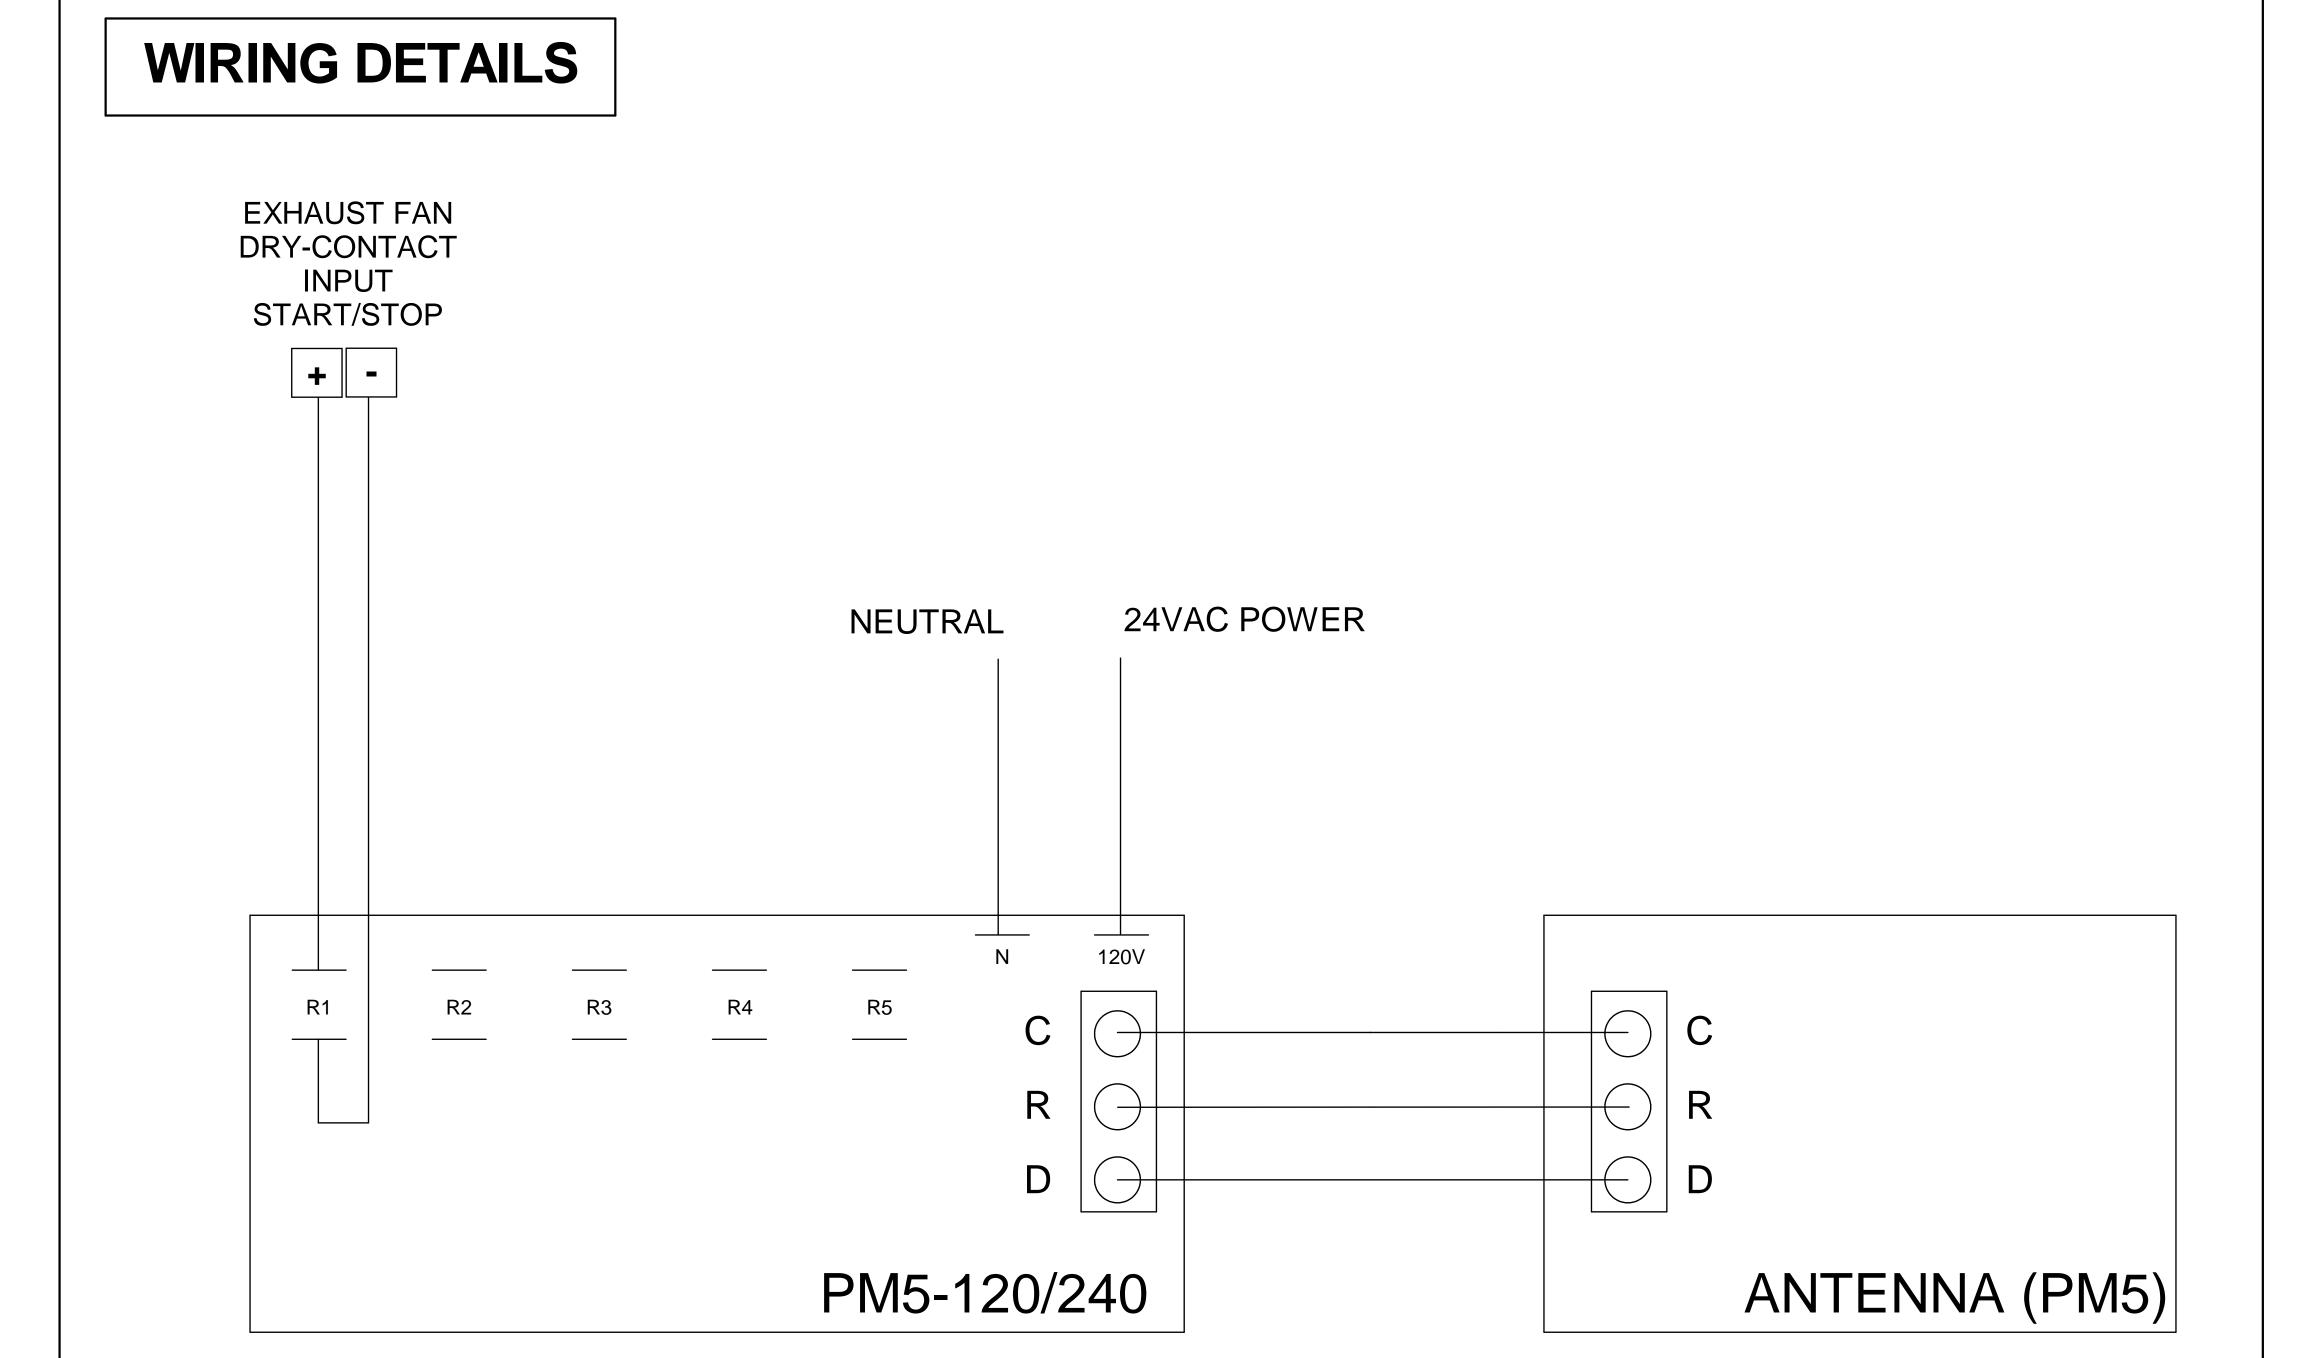

CONFIGURATION

CONFIGURATION WITH THE PELICAN WEB-APP, GO TO ADMIN > POWER CONTROL MODULE.

RELAY 1 = ENABLE

NAME = EF-(#)

GROUP = EXHAUST FAN CONTROL

DESCRIPTION = ENTER LOCATION OF THE EF.

MANUAL OVERRIDE TIME = TBD

ON CONTACT POSITION = CLOSED

POWER SIZE = BLANK

PROJECT NUMBER:

REV. NO.

REV. NO.

REV. NO.

Exhuast Fan Control - Start-Stop

Ventilation and Exhaust Fans

PROJECT NAME:

D-20040301

DRAWN BY:

PWS

SCALE:

NTS

DATE CREATED: 4/3/2020

PAGE 1 OF 1

